

DELTA AP1 Aseptic Valves

FOR HIGHER RELIABILITY, LONGER LIFETIME AND LOWER COST



DESCRIPTION

The DELTA AP1 Aseptic valve series from APV comes in two versions – the Techno and the Econo. Each is available in a hand-operated and pneumatically actuated version.

The housing of the Techno is made of stainless steel 1.4435 with a Ra value of < 0.5 micron for product-wetted surfaces as required by the pharmaceutical industry. The Techno body is supplied with a DIN EN 10204 (3.1) test certificate. Both the Techno and the Econo versions are EHEDG and 3A certified.

OPERATING PRINCIPLE

The diaphragm shaft with metal cone is built from one TFM/PTFE piece.

The opening and closing of the valve is performed either by a pneumatic actuator or by a manual hand-wheel.

A unique support system provides for more reliability and a longer lifetime of the diaphragm. Moreover, this system protects the diaphragm against excess pressure in every actuating position during opening and closing.


APPLICATIONS

The aseptic diaphragm valve DELTA AP1 is used in aseptic processes of the pharmaceutical, biotechnological, cosmetics and food industries. It is applied, for example, as process valve, dosing valve, sampling valve or drain valve in combination with an APV W+ centrifugal pump. In this application, the DELTA AP1 valve is welded, free of dead spaces, direct to the pump housing.

PRODUCT FEATURES AND BENEFITS

Diaphragm support system

This unique construction consisting of a static and a dynamic part, relieves the diaphragm from process pressure, increasing its lifetime considerably.

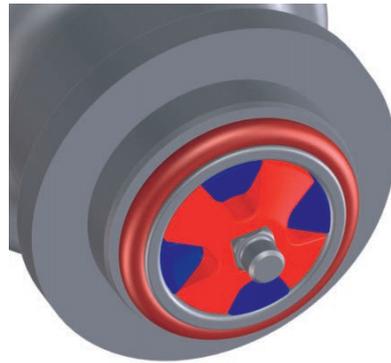

UNIQUE FAN SUPPORT FOR EXTENDED DIA-PHRAGM LIFETIME.

Flat diaphragm


The flat diaphragm is built for reliability. It ensures smooth product flow and reduces pressure drops. The flatness of the design minimises product-wetted surface, and reduces cleaning time and consumption of CIP agents.

TFM/PTFE diaphragm

The PTFE diaphragm is very strong and robust. In contrast to standard elastomers, the diaphragm enables the use of a variety of cleaning agents and products.

Rotatable angle connections for air hoses

provide for space-saving installation and easy maintenance of the valves.

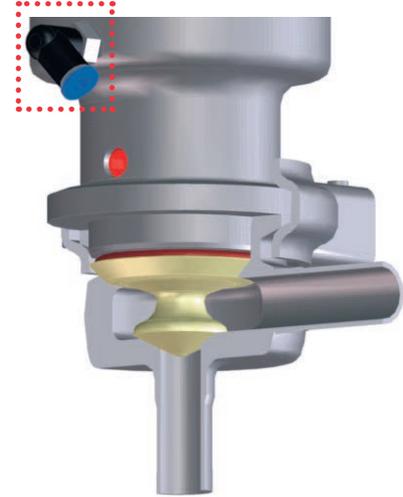

ROTABLE ANGLE CONNECTION FOR AIR HOSE

3.1 marking

The Techno line comes with a DIN EN 10204 (3.1) certificate.

Globular valve body

A globular valve body avoids dead ends preventing consequent contamination and longer CIP times.

Different body configurations available

The variety in valve body configurations ensures the right body for any installation.

Clamp housing closure

The clamp housing closure between valve body and actuator enables quick and easy service, thus minimising maintenance costs.

LIMITED COMPRESSION OF DIAPHRAGM SHAFT FOR MANUAL VALVE


Closing of the valve, the valve shaft is driven into closed position by spring force. Thus, excess pressing of the diaphragm shaft by manual force is excluded.

OPTIONS


The DELTA AP1 is available with a choice of three electrical feedback systems, enabling process monitoring via PLC:

- A module with two proximity switches for the open and closed position signals
- A module with one proximity switch for the closed position signal

- A module with two mechanical micro switches for the open and closed position signals

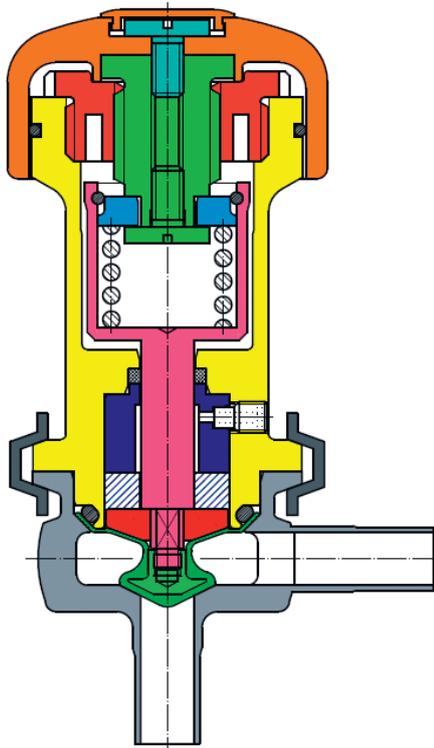

MANUALLY ACTUATED VERSION

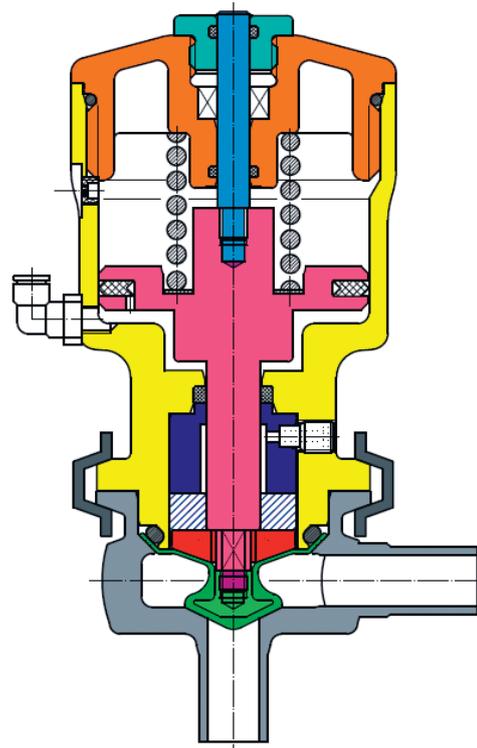

PNEUMATICALLY ACTUATED VERSION

PRODUCT SPECIFICATIONS

SIZES / DIN - PIPE STANDARD DIN 11866 / ISO - PIPE STANDARD DIN EN ISO1127	1/2" DN10, DN15, DN20
DIAPHRAGM MATERIAL	PTFE TFM 1705 (FDA 21CFR177.1550, USP CLASS VI)
VALVE BODY MATERIAL	TECHNO: 1.4435 ECONO: 1.4404
ACTUATOR MATERIAL	1.4301
SURFACE ROUGHNESS	TECHNO: RA < 0.5 MICRON ECONO: RA < 0.8 MICRON
HOUSING CONFIGURATIONS	L, T AND TANK OUTLET VERSIONS
MAX. TEMPERATURE	135°C (SHORT TIME SIP 150°C)
MAX. LINE PRESSURE	10 BAR
MIN. CONTROL AIR PRESSURE	6 BAR
MAX. CONTROL AIR PRESSURE	8 BAR

DELTA AP1 Aseptic Valves

**FOR HIGHER RELIABILITY,
LONGER LIFETIME AND
LOWER COST**

SPX FLOW

SPX FLOW

Gottlieb-Daimler-Strasse 13

D-59439 Holzwickede

Germany

T: (+49) (0) 2301-9186-0

F: (+49) (0) 2301-9186-300

SPX FLOW reserves the right to incorporate our latest design and material changes without notice or obligation.

Design features, materials of construction and dimensional data, as described in this bulletin, are provided for your information only and should not be relied upon unless confirmed in writing. Please contact your local sales representative for product availability in your region. For more information visit www.spxflow.com.

The green ">" is a trademark of SPX FLOW, Inc.

APV-8004-GB VERSION 05/2017 ISSUED 05/2017

COPYRIGHT © 2017 SPX FLOW, Inc.